

GoldGXW-15

owners manual

Contents

Contents	1
Introduction	1
Features	2
Unpacking	3
Feet Assemblies on Carpet	3
Feet Assemblies on Hard Floor	3
Positioning	3
Amplifier Panel and Display	4
Remote Control	6
Set Up	7
Power Cycle	7
Using an AV Amplifier/ Receiver	8
Using a Stereo Amplifier	8
Factory Settings	8
Running LEO	9
Menu System	10
Low Pass Filter	10
Phase	11
EQ	12
Enabling LEO	13
Saving a Preset	14
Night Mode	14
Recalling a Preset	15
Auto On	15
Display Control	16
Owner Information	16
Specifications	17

Introduction

Thank you for your purchase of Monitor Audio GXW-15 subwoofer, which has been designed and constructed using quality systems and materials to provide years of enjoyment, reliability and pride of ownership.

This product, as with all of the Gold GX range, is hand crafted from top to bottom using traditional woodworking skills for our sumptuous cabinets, married with the state of the art technology of our renowned drive units.

Music is and should be a natural enhancement of life. It stimulates the imagination, changes your mood, helps you relax, and provides endless hours of entertainment.

Please read through this manual to familiarize yourself with any safety advice and how best to set up your subwoofer to achieve the very best listening experience.

Please retain this manual for future reference.

GXW-15 Features

- Compact design with forward firing 15" long-throw woofer.
- Class D amplifier section with advanced SMPSU (Switch Mode Power Supply Unit).
- Dynamic power limiter. DSP (Digital Sound Processing) control of the power amplifier monitors available power and limits certain frequencies dependant on available power reserve.
- Sealed cabinet for ultimate bass control and ease of installation.
- All features and settings adjustable by remote control.
- Full DSP Control with all functions controlled in the digital domain, providing more advanced control of complex filter characteristics than conventional analogue circuitry.
- 3 Memory locations per input.
- Automatic control of input sources, e.g.; a LFE input and an alternative input such as 2 channel, stereo hi-fi amplifier can share a single GXW-15. It will switch automatically between the two.
- 4 x pre-set EQ settings; Music, Movies, Impact & Off.
- LEO room correction system.
- Auto switch on/off, or 12V trigger input. Controlled by DSP to provide accurate automatic switch on when an input signal is detected.
- Front mounted IR sensor and display.
- Night mode setting.

LEO

LEO*, Listening Environment Optimizer™, is the automatic room correction system feature on the GXW-15.

How it Works

The D2Audio™ LEO sound processing uses a microphone connected to the GXW-15 to listen to its acoustic response at key positions in the room. The LEO system generates several special audio signals that allow the internal DSP (Digital Signal Processor) to understand how the GXW-15 sounds within its environment. Once the DSP has established the baseline sound characteristics, several specially selected frequencies will be tested. These frequencies have been selected to detect room mode effects. The DSP is used a second time to calculate where the sound is too strong and where it is too weak. It uses this information to generate a special correction frequency curve for each situation. The DSP is used a third time to determine the best correction curve and the best way to implement that curve. These three steps are all done in a single measurement from the microphone. The correction is then stored in the amplifier delivering the best sound possible from that time forward.

With the GXW-15 custom tuned to the room, all that is left to do is sit back and enjoy the new sonic experience.

LEO™ and Listening Environment Optimizer™ are Trade Marks of D2Audio®.
LEO™ and D2Audio are Registered Trademarks of Intersil Corporation

Unpacking

Care must be taken at all times when handling the GXW-15 due to the extreme weight of the product. We recommend a two-person lift wherever appropriate.

The feet/spike assemblies, 12v trigger cable and mains power cord/s are contained within the packaging and should be removed.

Please select the power cord appropriate to your Country/location. Mains voltage selection for 100-120 Vac or 220-240 Vac operation is factory preset. Do not adjust.

To remove the GXW-15 from its carton, place some protective material on the floor and having removed any items of packing from the top of the pack carefully lift the inner sleeve from the carton. (Also see icons on the carton). Remove fixing tape from the bag and expose the base of the cabinet to allow fitting of the spiked feet into the threaded inserts as described below.

Spiked Foot Fixing For Carpeted Floors

The spiked foot assembly incorporates a spike for use on carpeted floors and also, a soft polymer pad (for use on wooden or tiled floors).

Please ensure there are no hidden wires under the carpet, or trailing mains leads that could be damaged by the spikes.

The foot comes fully assembled for use on carpeted floors. All that is required is fixing into the cabinet. This is achieved by simply screwing the feet fully into the 4, threaded inserts in the underside of the cabinet. If your carpet has a very thick pile, remove the soft polymer pad from the foot to ensure the spike goes right through the carpet onto the floor. With great care turn your cabinet the right way up. Place the cabinet in your desired location, and check that it is level on all sides. If it is slightly uneven, unscrew the foot at the lowest point and check again. Continue this process until the cabinet is fully level. Use the locking nut on the foot to fix it in place and to stop any unwanted vibrations.

Spiked Foot Fixing For Wooden/Hard Floors


For use on solid floors or where spikes are inappropriate, it is possible to use the foot without the spike insert. To use the foot in this manner carefully grip the knurled portion of the spike and rotate anti clockwise to unscrew the spike fully.

You may find it easier to first remove the polymer pad to gain more purchase on the spike.

The pad should be replaced before carrying out the levelling operation previously described.


Positioning

The GXW-15 should now be sited in the most suitable position, preferably not directly in the corner of a room as this may cause excessive bass boom. Once a desirable position is achieved it is important to check if the cables are long enough to reach comfortably without being under tension. Leave the GXW-15 unplugged until you are happy with it's location.

 **Never connect or disconnect any of the input connections with the GXW-15 switched on.**

Optimal control settings will depend entirely on your system configuration, room and personal tastes.

Amplifier Panel and Display

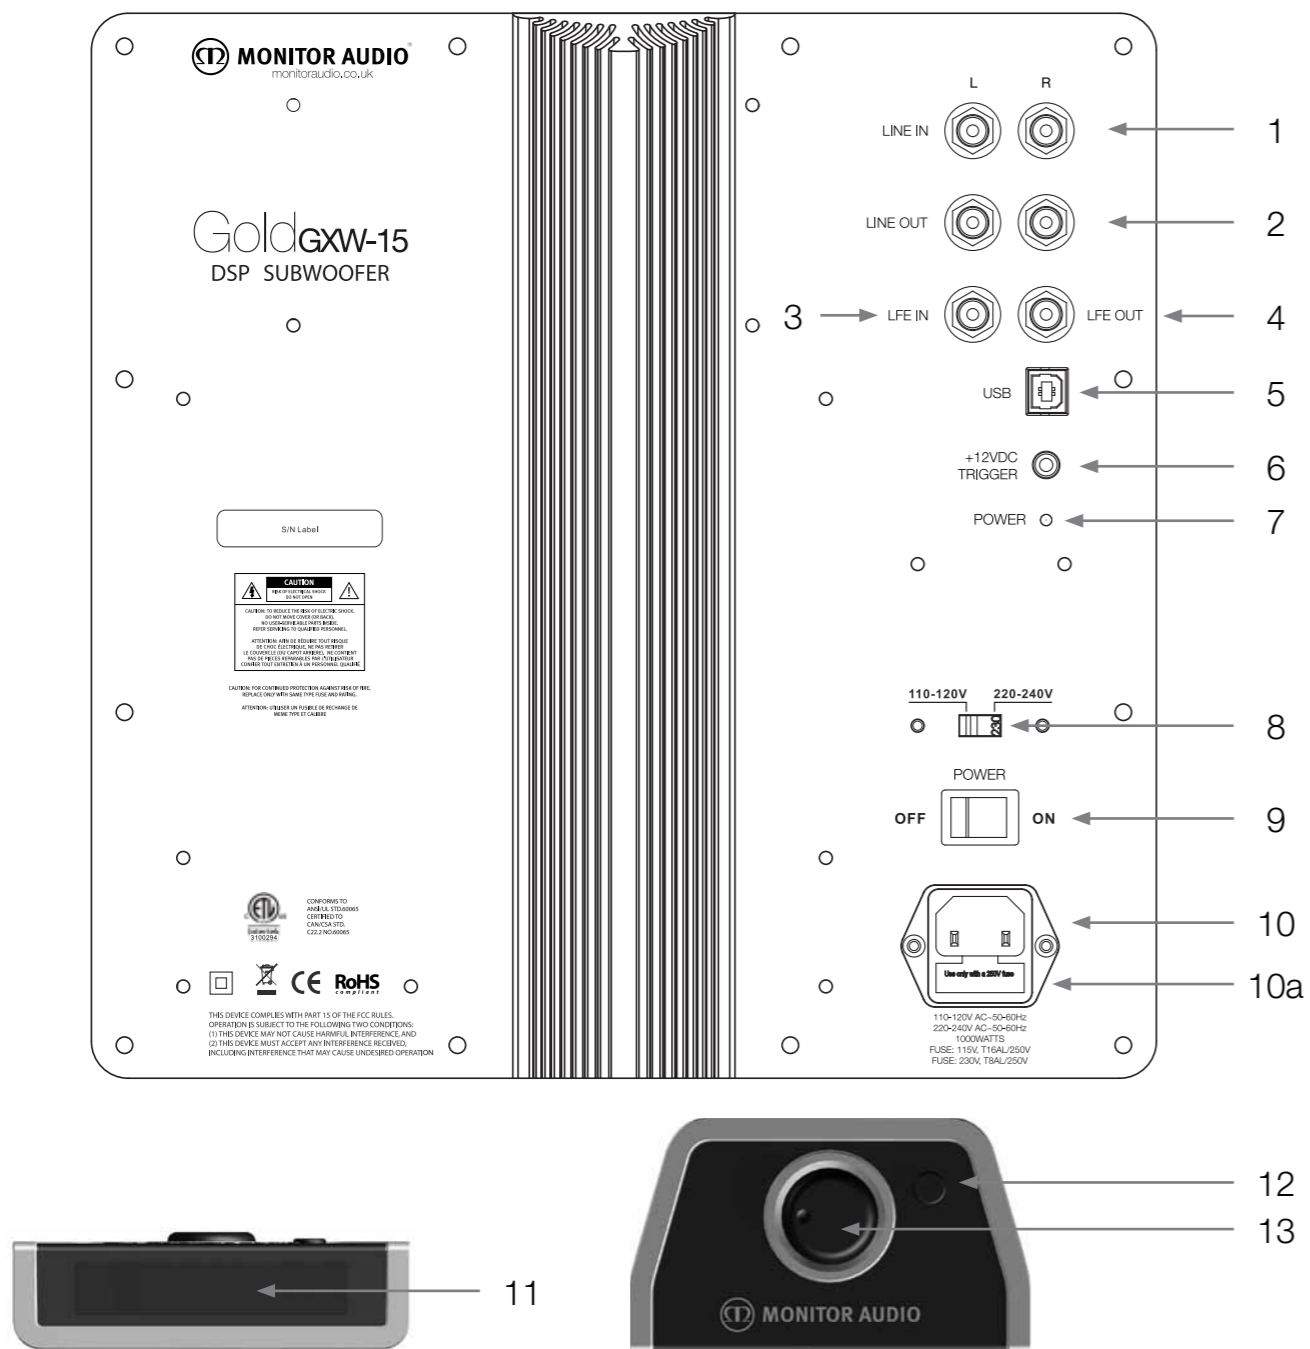

1. RCA Line Level Inputs (Stereo Left & Right)

For connection to a 2 channel/ stereo amplifier system. Connection should be provided by a pair of high-quality signal cables from the pre-out section of an amplifier. Switching between the Stereo input and LFE is done automatically. The LFE will take priority if a LFE and Stereo signal is presented at the same time. **Note:-** cable lengths should not exceed 10 metres to avoid interference from other electrical appliances.

2. RCA Line Level Outputs (Stereo Left & Right)

To be used to feed additional sub-woofers in addition to the GXW-15 by 'daisy chain' type connection. The outputs are link out only connections and do not provide any form of filtering.

3. LFE Input (RCA Type)

This input is to be used when connecting the GXW-15 to an AV amplifier/ receiver. When using the LFE input, the crossover function in the menu/ set-up is not used. This is due to the crossover function being controlled by the AV amplifier/ processor to which it is connected. Please refer to the crossover table on page 11 for further advice on which setting to use. Input between LFE and Stereo input is switched automatically.

4. LFE Output/ Link (RCA Type)

To be used to feed additional sub-woofers in addition to the GXW-15 by 'daisy chain' type connection. The output is a link out only connection and does not provide any form of filtering.

5. USB Connector

This is provided to update the firmware in the GXW-15.

6. 12 Volt Trigger Input ~ Centre Pin = +12Vdc.

For external power control from AV amplifier/ Receiver to the GXW-15 (2 metre lead supplied). This 12 volt signal is supplied by the AV amp/ receiver and tells the GXW-15 to turn on from standby mode. This allows a more accurately controlled method of the auto on/ off function. It is also a lot more energy efficient. The stand by function on the remote will not be operable when using the +12v trigger.

7. Power LED

This LED indicates that the mains power is connected and turned on. If the LED is RED, the GXW-15 is in stand-by mode waiting to receive an audio signal, an instruction from the encoder/ remote or a signal from the 12v trigger. If it is green, the unit is operational and the display will show a single red dot (default operational display).

8. Voltage Selection Switch

Factory preset to suit the voltage of the country of origin. This should not be adjusted.

9. Mains Power Switch

Mains 'rocker switch' providing overall power off and on/ auto. In the on/auto mode, the unit will turn on when an input signal is sensed or the encoder/ power button on remote pressed, and will turn off after 10 minutes when the signal is removed (source turned off). Alternatively, when using the 12v trigger (see above), when the source is turned on or off.

10. IEC Mains Power Connector/Fuse Location

The GXW-15 is supplied with a two-pin mains input socket for connection to the mains supply. Use ONLY the appropriate IEC mains lead provided with the product. Also fitted is an external mains fuse. If a fuse blows during operation a spare fuse is provided within the fuse holder for replacement. If you wish to change the fuse, you can do this by removing the IEC mains lead and carefully levering out the original fuse from its holder below the IEC mains input socket (10a, opposite). If the fuse blows again it is advisable to seek help from an authorised service agent. DO NOT attempt to re-fit a further fuse as this could result in serious damage to the amplifier unit.

11. Display

The default operating display will show a single dot in the middle. When powering up it will run through a set cycle showing the input and the preset being used. For full details of the menu system, please refer to page 10

12. LEO Microphone Input


Used to set the sub woofer up to adjust for the room acoustics. Refer to page 9.

13. Push-Turn Control Button Encoder

This gives you control of your GXW-15. You can adjust the volume (by turning the control button) and enter the menu system. Pushing the rotary encoder allows access of the menu system (refer to page 10).

*LEO™ and Listening Environment Optimizer™ are Trade Marks of D2Audio®.
LEO™ and D2Audio are Registered Trademarks of Intersil Corporation

Remote Control

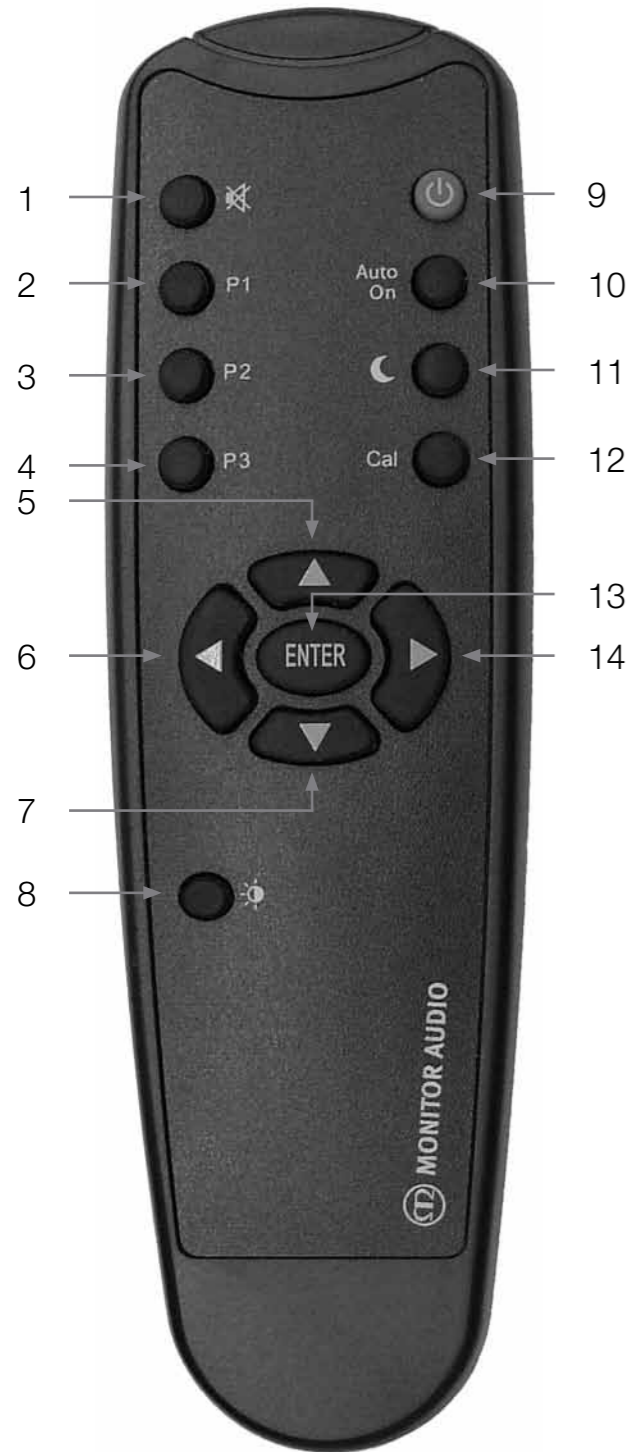

1. Mute
Toggle between mute and normal operation. Mutes output so nothing can be heard, and can only be accessed by the remote.
2. Preset 1
Memory Preset 1. Independent for each input (Refer to pages 14/ 15).
3. Preset 2
Memory Preset 2. Independent for each input (Refer to pages 14/ 15).
4. Preset 3
Memory Preset 3. Independent for each input (Refer to pages 14/ 15).
5. Up Arrow
Increases Volume and when in the menu system, adjusts the selected option.
6. Left Arrow
Allows scrolling back through the menu system.
7. Down Arrow
Decreases volume and when in the menu system, adjusts the selected option.
8. Display Brightness
Adjusts the intensity of the display (Refer to page 16).
9. Stand By
Manually turns the GXW-15 on , out of stand by mode, or puts it into stand by mode. This does not function when Auto on is selected.
10. Auto ON
Toggles the Auto On feature on and off. When on, the unit is fully automatic in operation. When off, the user has to turn the GXW-15 on and off (Refer to page 15).
11. Night Mode
Limits the output by -20dB without loosing any of the dynamics of the GXW-15 (Refer to page 16).
12. LEO Calibration
Runs the LEO room equalisation system (Refer to page 9).
13. Enter
Selects desired menu option.
14. Right arrow
Enters the menu system. Allows scrolling through the menu (Refer to page 10).

LEO™ and Listening Environment Optimizer™ are Trade Marks of D2Audio®.
LEO™ and D2Audio are Registered Trademarks of Intersil Corporation

Set Up

Once in position and cables have been routed (no longer than 10 metres to avoid interference), connect them to the GXW-15. Mains power cable should be connected last. Do not play any music at this stage.

NOTE: The entire set up procedure can be done via the control panel or remote control handset.

NOTE: The GXW-15 automatically switches between inputs. There is no option to do this manually. The LFE input will take priority over the Stereo input. The display will show either LFE or 5tE as part of the power cycle (see below).

NOTE: There are 3 memory locations for user settings for each input. Please refer to page 14.

Factory Settings

The default settings are:

- LPF:- 60hz
- Slope Angle: -24dB/ Octave
- Phase:- 0 degrees
- EQ:- Off
- LEO*:- Off
- Volume:- -20dB (**Note:** this is a low setting and should be set to 0dB before config,)

These should be treated as the initial setting when setting up your product. Further fine tuning of the settings can be done if you feel these factory settings do not match your environment or tastes.

To return the product to it's factory settings and to erase the memory, a Master Restore can be performed. This is achieved by:

1. Turning the subwoofer off at the mains power switch.
2. Hold down the encoder, and turn the power back on at the same time.
3. Keep the encoder pressed for 5 seconds, until the display flashes **rE5** three times if the factory reset has been successful.

LEO™ and Listening Environment Optimizer™ are Trade Marks of D2Audio®.
LEO™ and D2Audio are Registered Trademarks of Intersil Corporation

Power Cycle

The GXW-15 can be powered up using either the encoder, the remote, or fully automatically. It will go through the following sequence:

Press Encoder/ press Power button on remote/ receive signal > display shows **On** for 2 seconds > the input for 5 seconds, eg **LFE** > then the selected preset for 3 seconds, eg **1** > Then the default operating screen is displayed . (single dot in the centre of the display).

If no signal is received for 10 minutes, it will go back into standby mode. If the power button on the remote is pressed it will enter standby mode. In both cases the display will show **OFF** for 10 seconds and then display nothing.

Initial Settings Using an AV Processor/Receiver

Connect a single interconnect cable (no longer than 10 metres) from an AV processor/ receiver to the connection marked LFE input. If you have an additional subwoofer, the LFE Out can be used to supply the signal.

Using the LFE input, negates the GXW-15's crossover filter. This needs to be set on the AV processor/ receiver. Please refer to the product user manual for further information. As a guide, the crossover should be set up in accordance with the low frequency limit of the main speakers (see table on page 11).

Before running the auto setup on the AV processor/ receiver (refer to the AV equipment's owners manual), carry out the following initial steps:

- Run the LEO room equaliser (Page 9)
- Set the volume to 0dB (Page 5/ 6)
- Phase to 0 (Page 11)
- EQ to OFF (Page 12)
- LEO to ON (Page 13). Leo turns on automatically after calibration

When the above settings have been made, you can run the auto set up of the AV amplifier. Further personalisation and adjustment can be made after the auto set up has been run by adjusting the EQ. It is also suggested that the settings of the auto set up are checked against our recommended settings depending on the rest of your system. Do not be afraid to adjust them on your AV equipment.

Initial Settings Using 2 Channel (L & R) Stereo Inputs

Stereo L & R input may be required if using a 2-channel stereo amplifier, or an amplifier with no LFE output. Connect 2 x interconnect cables (left and right) from an amplifier to connections marked Line Inputs L & R.


With your pre amplifier set to a low level set the subwoofer up using the suggested guide below before playing any music/ test tones.

- Run the LEO room equaliser (Page 9)
- Set the volume to 0 (Page 5/ 6)
- LFE should be set in accordance to you main speakers (Page 11)
- Phase to 0 (Page 11)
- EQ to OFF (Page 12)
- LEO to ON (Page 13)

Running LEO

Before enabling the LEO room correction, it needs to be set up. To do this follow these simple steps. Please refer to page 13 for enabling this feature once it has been run.

1. Connect the jack lead of the microphone to the jack socket next to the encode as in the illustration below.

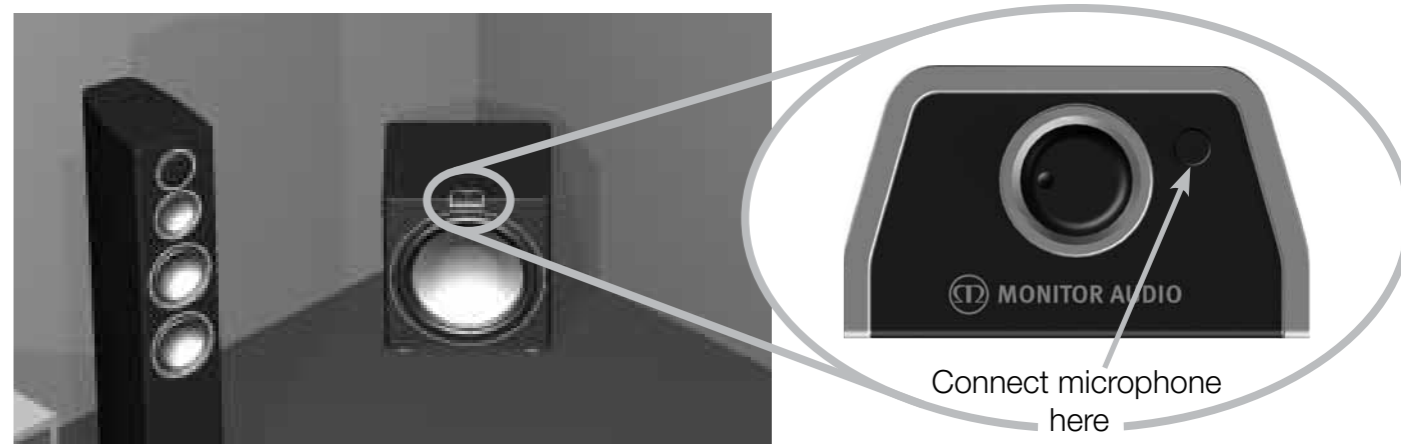

2. Place the microphone at your listening position at approximate ear height.
NOTE: Ensure there are no obstructions between the GXW-15 and the microphone other than those normally in the room.
3. Hold down the “Cal” button on the remote for 3 seconds. When it starts, the display will show “CAL” and a test tone will be heard.
4. When the LEO calibration has finished, the display will revert back to the home screen (single red dot in the middle of the display). The LEO function will also have been turned on.

Menu System

Low Pass Filter

The Low Pass Filter (LPF) sets the “crossover point” and the slope angle with the main speakers and is only enabled in stereo mode. When using the LFE input, the crossover setting option is not available as it is controlled by the AV amplifier/ receiver.

The table opposite gives suggested crossover points dependant on the main speakers. The slope angle depends on how sharply you want the high frequencies to roll off. This can be adjusted in -6, -12, -18, -24dB/octave steps. It is recommended that when partnering the GXW-15 with sealed loudspeakers, a slope of -12dB/octave is used and when partnering with ported loudspeakers, -24dB/octave is used.

Setting the LPF Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to set the LPF:

1. Press the RIGHT arrow. The display will change to LPF
2. Press ENTER. The display will change to show the current setting, eg. 60
3. Press the UP/ DOWN arrows to adjust the setting
4. Press ENTER to select and save. The display will flash twice to confirm selection, and then display the slope angle, eg -12
5. Press the UP/ DOWN arrows to adjust the setting
6. Press ENTER to select and save. The display will flash twice to confirm selection, and then display **L PF**

Setting the LPF Using the Control Panel Encoder

With the GXW-15 powered up and out of standby mode, follow the next steps to set the LPF:

1. Press the encoder down. The display will change to **L PF**
2. Press the encoder again to enter the LPF menu. The display will change to show the current setting, eg. **60**
3. Rotate the encoder left or right to change the setting
4. Press the encoder to select and save. The display will flash twice to confirm selection, and then display the slope angle, eg - **12**
5. Rotate the encoder left or right to change the setting
6. Press the encoder to select and save. The display will flash twice to confirm selection, and then display **L PF**

Suggested Crossover Frequencies

Below is a table that shows suggested crossover frequencies to set the GXW-15 to when partnering main speakers.

Type of Main Speaker	Monitor Audio Product	Crossover Control Setting
Large floor-standing speaker	PL300/200; GX200/300; RX6/8; BX6	40-60 Hz
Small floor-standing speaker	RX6; BX5; R270HD	50-70Hz
Large stand-mount/ bookshelf speaker	PL100; GX100	50-80 Hz
Small stand-mount/ bookshelf speaker	GX50; RX1/2; BX2; R225/250HD; Apex 40	60-90 Hz
Small satellite speaker	BX1; R45/90/180HD; Apex 10	80-120 Hz

Phase

The Phase Control is used to synchronise any delay between the GXW-15 and main/ satellite speakers. When the GXW-15 is in phase with the main/ satellite speakers the sound should be full bodied. Sit in a normal listening position whilst adjusting the phase settings. When set correctly the location of the sub-woofer should be almost undetectable. Experimentation is advisable. However it should be noted that in most cases the phase control should be set to 0 degrees, especially when using a digital AV processor or AV receiver amplifier. The phase angle can be adjusted in steps of 0, 90, 180, 270, degrees.

Setting the Phase Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to set the Phase:

1. Press the RIGHT arrow. The display will change to **L PF**
2. Press it a second time so the display changes to **PHA**
3. Press ENTER. The display will change to show the current setting, eg. **0**
4. Press the UP/ DOWN arrows to adjust the setting
5. Press ENTER to select and save. The display will flash twice to confirm selection and then display **PHA**

Setting the Phase Using the Control Panel Encoder

With the GXW-15 powered up and out of standby mode, follow the next steps to set the Phase:


1. Press the encoder down. The display will change to **L PF**
2. Rotate the encoder 1 position to the right. **PHA** will be displayed
3. Press the encoder again to enter the Phase menu. The display will change to show the current setting, eg. **0**
4. Rotate the encoder left or right to change the setting
5. Press the encoder to select and save. The display will flash twice to confirm selection, and then display **L PF**

EQ

There are four EQ options to choose from, Music, Movies, Impact and Off. These can be set at any time in accordance with personal choice or the predominant operation of the system. They can also be selected and stored during the set up process from the menu system.

During the set up they are numbered 1 - 3 and off. The definitions and an example of the curve are below.

- EQ 1: Music
- EQ 2: Movies
- EQ 3: Impact

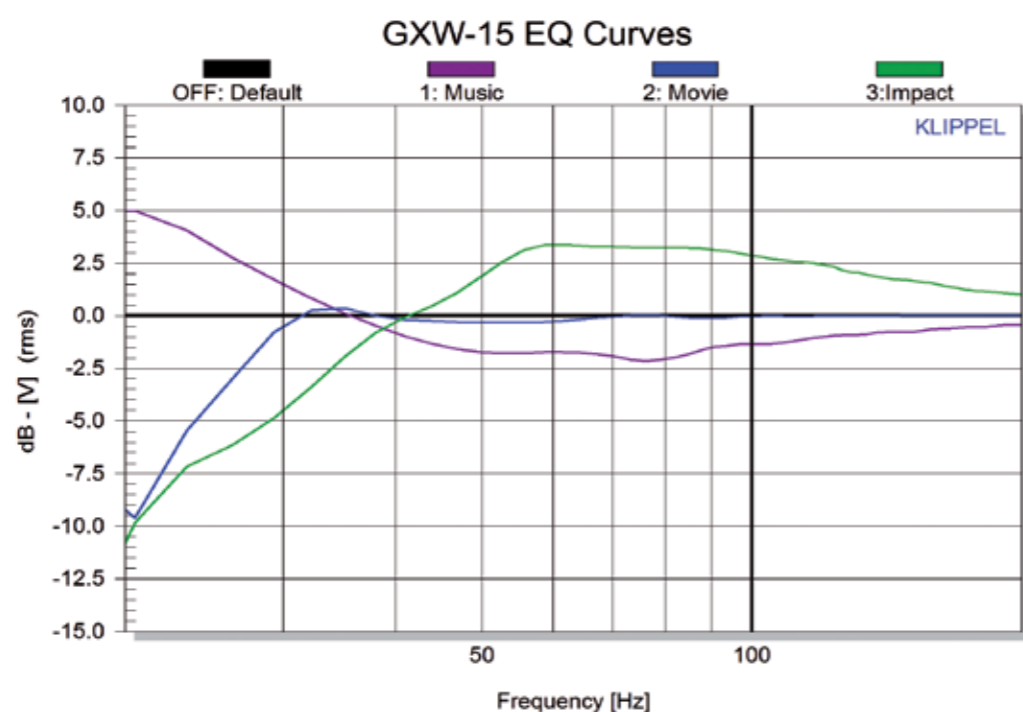

Adjusting the EQ settings will change the perceived output levels of the GXW-15. With this in mind, it is highly recommended to run the auto set up of the AV Processor/ Receiver again.

Setting the EQ Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to set the EQ:

1. Press the RIGHT arrow 3 times. The display will change to *LPF* then *PHA* then *EQ*
2. Press ENTER. The display will change to show the current setting, eg. *OFF*
3. Press the UP / DOWN arrows to adjust the setting
4. Press ENTER to select and save. The display will flash twice to confirm selection and then display *EQ*

Setting the EQ Using the Control Panel Encoder

With the GXW-15 powered up and out of standby mode, follow the next steps to set the EQ:

1. Press the encoder down. The display will change to *LPF*
2. Rotate the encoder 2 positions to the right. *PHA* then *EQ* will be displayed
3. Press the encoder again to enter the EQ menu. The display will change to show the current setting, eg. *OFF*
4. Rotate the encoder left or right to change the setting
5. Press the encoder to select and save. The display will flash twice to confirm selection, and then display *EQ*

LEO

After the room correction has been run (refer to page 9), it can then be enabled/ disabled within the menu:

Setting the LEO Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to set the LEO:

6. Press the RIGHT arrow 4 times. The display will change to *LPF* then *PHA* then *EQ* then *LEO*
7. Press ENTER. The display will change to show the current setting, eg. *OFF*
8. Press the UP / DOWN arrows to adjust the setting
9. Press ENTER to select and save. The display will flash twice to confirm selection and then display *LEO*

Setting the LEO Using the Control Panel Encoder

With the GXW-15 powered up and out of standby mode, follow the next steps to set the LEO:

1. Press the encoder down. The display will change to *LPF*
2. Rotate the encoder 3 positions to the right. *PHA* then *EQ* then *LEO* will be displayed
3. Press the encoder again to enter the LEO menu. The display will change to show the current setting, eg. *OFF*
4. Rotate the encoder left or right to change the setting
5. Press the encoder to select and save. The display will flash twice to confirm selection, and then display *LEO*

LEO™ and Listening Environment Optimizer™ are Trade Marks of D2Audio®.
LEO™ and D2Audio are Registered Trademarks of Intersil Corporation

Saving your Settings

Once you have been through the menu, the chosen settings can then be saved to one of the 3 presets (per input). This can be done by either the remote or the encoder:

Saving your Settings Using the Remote

With the GXW-15 powered up, out of standby mode, the desired input selected, and the system set up using the guides previously, follow the next steps to save the settings:

1. Press and hold P1 (or the appropriate preset number) on the remote for 3 seconds. The display will change to **SEt**
2. The display will then change to show the preset number, eg. *1*. Then back to the default display “. “

Saving your Settings Using the Control Panel Encoder

With the GXW-15 powered up and out of standby mode, the system set up using the guides previously, follow the next steps to save the settings:

1. Press and hold the encoder down for 3 seconds. The display will change to **PrE**
2. Rotate the encoder left or right to show the current Preset location. eg. *1*
3. Rotate the encoder left or right again to change the Preset location, press and hold for 3 seconds to store. The display will show **SEt**
4. The display will flash twice with the preset number to confirm selection, and then back to the default display “. “

Night Mode

Night Mode enables the user to limit the output of the GXW-15 without sacrificing any of the performance. This is beneficial especially when still wanting the sub to be on and audible at low levels, but don't want the full impact from some of the more intense parts of a sound track.

NOTE: This feature can only be controlled by the remote.

Controlling the Night Mode Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to enable/disable the auto on feature:

1. To turn night mode ON, press the Night Mode button on the remote (refer to page 6). The display will show **On** and then change to “. .” after 7 seconds. This is the default display when in night mode
2. To turn night mode OFF, press the Night Mode button on the remote (refer to page 6). The display will show **OFF** and then change to “. .” after 7 seconds

Recalling the Presets

If a number of different presets have been stored for each input, they can be recalled by following these steps:

Recalling a Preset Using the Remote

With the GXW-15 powered up and out of standby mode, the system set up using the guides previously, follow the next steps to recall a preset:

1. Press P1 (or the appropriate preset number) on the remote. The display will change to **PrE**
2. The display will then change to show the preset number, eg. *1*. Then back to the default display “. “

Recalling a Preset Using the Control Panel Encoder

With the GXW-15 powered up and out of standby mode, the system set up using the guides previously, follow the next steps to recall a preset:

1. Press and hold the encoder down for 3 seconds. The display will change to **PrE**
2. After 3 seconds, or rotate the encoder left or right to show the current Preset location. eg. *1*
3. Rotate the encoder left or right again to change the Preset number and press to select
4. The display will flash twice to confirm selection, and then back to the default display “. “

Auto On

The auto on feature enables the GXW-15 to turn off/ on automatically, or to be manually controlled. When Auto On mode is enabled, the user loses the ability to turn the GXW-15 off into Stand By mode and it will be fully automatic in operation. With Auto On mode turned OFF, the GXW-15 becomes completely manually operated. It will not turn on or off when a signal is sensed or removed.

NOTE: This feature can only be controlled by the remote.

Enabling the Auto On Feature Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to enable/disable the auto on feature:

1. Press the “Auto ON” button on the remote. The display will show the current setting. eg. **On**
2. Press the “Auto ON” button again to turn the feature off. The display will then change to **OFF**

Display Control

If the display is considered too bright for the environment, it can be either dimmed or turned off completely. The options available are On, Off and Dim. these are cycled through by using the remote and are continuously looped.

NOTE: This feature can only be controlled by the remote.

Controlling the Display Brightness Using the Remote

With the GXW-15 powered up and out of standby mode, follow the next steps to enable/disable the auto on feature:

Press the display button (refer to page 6) to cycle through the options. The display brightness will change as the button is pressed.

NOTE: If The display is set to off and you wish to change some features, volume, preset, etc, the display will illuminate and will stay illuminated for 7 seconds after the final button is pressed.

Owner Information

Product Details

Model: GXW-15

Product Serial No: _____

Date of Purchase: _____

Dealer Details

Dealer Name: _____

Address: _____

Town, Post code, Country: _____

e-mail address: _____

Additional Notes: _____

Monitor Audio reserves the right to alter specifications without notice.

Specifications

System Format	Sealed Cabinet. 25mm M.D.F construction with internal bracing. Sealed amplifier compartment
Low Frequency Limit	18Hz
Upper Frequency Limit	40 - 120Hz Variable
Low Pass Filter Alignment	Active 4th order 24dB/octave (6/12/18/24 dB user adjustable)
Amplifier Power Output	650 Watts Continuous. 1200 Watts (peak)
Amplifier Classification	D2AUDIO™ DSP controlled, Class-D amplifier system. High current switch mode power supply (sm PSU)
Equalisation	4 Settings (Off/Music/Movie/Impact)
Phase Control	0-90-180-270 degrees
Auto Sensing Input Level Requirements	Line Level > 2mV. Standby after 10 minutes if no signal sensed
Digital Volume Level	-60 to +10dB in 1dB increments
Drive Unit Complement	1 x 15" C-CAM® sub-woofer driver featuring triple suspension and 3" long throw voice coil
12v Trigger Input	3.5mm mono jack socket
Connections	Stereo RCA in/out LFE in/out 12v Trigger in (3.5mm mono jack) LEO - 3.5mm Microphone input jack (microphone supplied)
Input Impedance	20K Ohms
Dimensions (H x W x D)	430 x 400 x 400 mm (16 15/16 x 15 3/4 x 115 3/4 Inches) Grille Depth: 28 mm (1 1/8 Inches)
Weight (unpacked)	35.3Kg (77.6lbs)
Mains Input Voltage	100 - 120 Vac / 220 - 240 50/60 Hz (Factory preset)
Electrical Certifications	CE/CB/ETL/Fcc/ErP (Energy saving compliant)
Power Consumption	Maximum 1000W. Standby < 0.5W (ErP Compliance)
Fuse Type	200mm UL/VDE (Value is region specific)
IR Remote Control Code	NEC SH6122



Monitor Audio Ltd.
24 Brook Road
Rayleigh, Essex
SS6 7XJ
England

Tel: +44 (0)1268 740580

Fax: +44 (0)1268 740589

Email: info@monitoraudio.co.uk

Web: www.monitoraudio.com

Designed in the United Kingdom

Version 2 2010